




PRODUCT INSTALLATION GUIDE

S100



Scan the code to watch the
product installation video

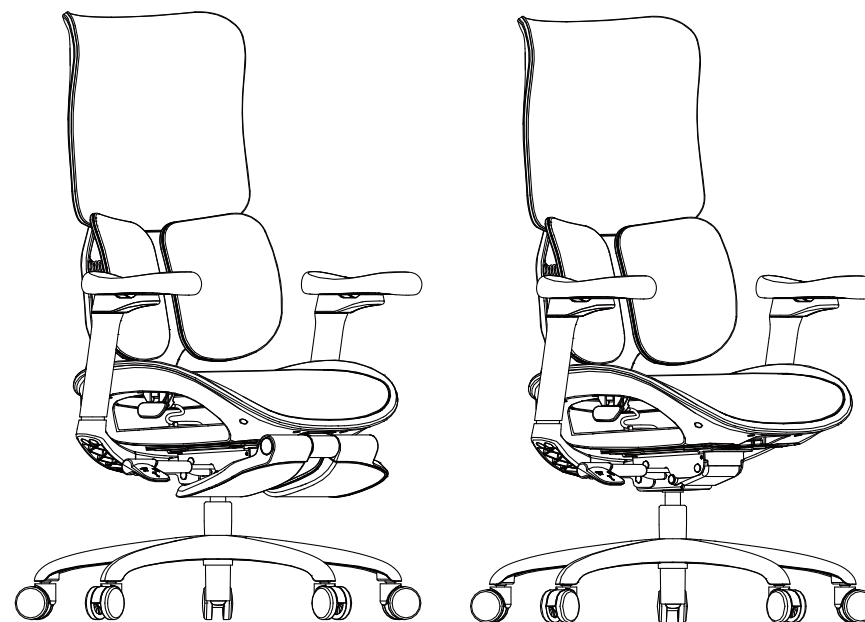

Company: Shenzhen Sihoo Intelligent Home Co., Limited

Company Address: Building #A, Yuyuan Industrial Park, Baoan District,
Shenzhen City, Guangdong Province, China

Manufacturer: FoShan Kezhimei Home Co., Limited

Manufacturer address: Jiujiang Town, Nanhai District, Foshan City,
Guangdong Province, China.

Company Website: www.sihoo.com/en/

Product size: 71.5*68(73)*108.5(123)CM

www.sihoo.com/en/



Assembly Introduction


(The size will be according to regular measurements)

<p>Insert 5 castors into the base, then insert the gas lift into the center of the base.</p>	<p>Connect the armrests to armrest brackets with 4 pcs (M6*30) screws, 4 pcs 6mm spacers and 2 pcs armrest tube spacers.</p>	<p>Place the Seat cushion* Chassis assembly upside down on the carton and insert the backrest into the chassis tail plate.</p>
<p>Connect the backrest and the tail plate of the mechanism with 4pcs M8X20 screws. (Lock the four holes near the outside of the tailplate, as shown in the figure)</p>	<p>Use 4pcs M6X25 screws and 4pcs 6mm Spacers to connect the armrest bracket to the backrest. Remove the non-slip lever from the handle to unlock the handle function.</p>	<p>Align the hole in the mechanism with the gas lift, then insert the gas lift.</p>
<p>The chair installation is completed.</p>		



Functions

(The size will be according to regular practice)

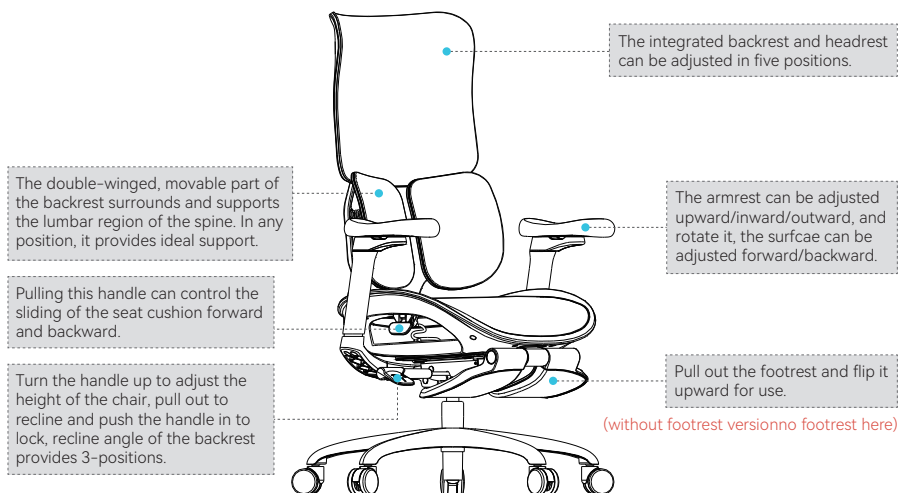

Installation Instruction

- Before installation, please read all the safety instructions below (drawings) carefully and master the installation steps and methods.
 - Counting the parts is complete or not, if there is any breakage.
 - To avoid injury, it is recommended that you wear gloves during installation.
 - Please choose a spacious and clean flat floor for installation, and then lay the paper sleeves on the ground, to avoid collision between components and the ground.
 - To avoid using the wrong screws, please fix all the screws before tightening them.
 - Please note that once the gas lift is installed, it is difficult to remove.
- If you need to disassemble the chair, such as moving, please gently tap the head of the gas lift with a rubber-tipped hammer several times, and then remove the base. After that, continue to gently tap the base, using the principle of vibration to make the gas lift fall off. Please be careful not to get hurt as tools are needed to do this.
- (Damage and accidents caused by this operation do not fall within the scope of product warranty, please careful operation.)

Precautions For Use

- Please note that this product is designed for one person, one chair is for one person only.
- For the use of product features, please follow the instructions in the product features display.
- Make sure all screws and components are locked tightly before using this product and check it at least once every 3 months.
- Please use on the flat floor, avoid wet or fireworks places, avoid long time direct sunlight.
- Don't use sharp or hooked objects to scrape the chair and do not get it close to the fire.
- Not allowing the child under 5 years old to sit on the chair alone.
- Please don't sit on the armrest, stand on the chair or use it as a ladder or footsteps, in case cause some danger.
- To avoid any harm to your fingers don't insert them into the mechanism while sitting.
- For your safety, no disassembly to the gas lift is allowed.



Parts List

(The size will be according to regular measurements; One more as a backup)

<p>Castors: 5 pcs</p>	<p>Chair Base: 1 pc</p>	<p>Gas lift: 1 pc</p>	<p>(without footrest version no footrest here)</p> <p>Seat cushion and mechanism assembly: 1 pc</p>
<p>Backrest: 1 pc</p>	<p>Armrest: 1 pair</p>	<p>Armrest Bracket: 1 pair</p>	<p>Hex wrench: 1 pc</p>
<p>Backrest screws (M8x20): 4+1 pcs</p>	<p>Armrest bracket screws (M6x25): 4+1 pcs</p>	<p>Armrest screws (M6*30): 4+1 pcs</p>	<p>6mm Spacers: 8+1 pcs</p> <p>Armrest tube spacers: 2 pcs</p>

Note: Please sort the screws and measure their lengths beforehand for easier assembly.